



## Compact worktool for daily use

### Features

- **External sensor** for difficult-to-access measurements
- **Base plate for adjustment** incorporated
- Delivered in a hard carrying case
- **Auto-Power-Off**
- Selectable measuring units: mm, inch
- TB 200-0.1US-RED. can only analyse these materials: cast iron, aluminium, copper, brass, zinc, quartz glass, polyethylene, PVC, grey cast iron, nodular cast iron, steel

### Technical data

- Precision: 0,5 % of [Max]
- Dimensions W×D×H 69×32×161 mm
- Battery operation, batteries standard 4× 1.5V AA
- Net weight approx. 0,3 kg

### Accessories

- **External sensor**, 5 MHz,  $\varnothing$  6 mm, for thin test materials: measuring range (steel) 1–50 mm, SAUTER ATB-US01
- **External sensor**, 5 MHz,  $\varnothing$  12 mm, for hot test materials: Measuring range (steel) 1–225 mm at temperatures up to approx. 40°C, 4–100 mm at temperatures up to approx. 300 °C, SAUTER ATB-US02
- **External sensor**, 7 MHz,  $\varnothing$  6 mm, for thin test materials: Measuring range 0,75–80 mm (steel), SAUTER ATU-US02
- **External sensor**, 5 MHz,  $\varnothing$  10 mm, SAUTER ATU-US09
- **External sensor**, 5 MHz,  $\varnothing$  8 mm, SAUTER ATB-US06
- **Ultrasound contact gel**, standard, can be reordered, approx. 60 ml, SAUTER ATB-US03

STANDARD					OPTION	

Model	Measuring range [Max] mm	Readout [d] mm	Sensor	Sound velocity m/sec	Option Factory calibration certificates	
					KERN	
SAUTER TB 200-0.1US.	1,5–200	0,1	5 MHz   $\varnothing$ 8 mm	500–9000	961-113	
TB 200-0.1US-RED.	1,5–200	0,1	5 MHz   $\varnothing$ 8 mm	-	961-113	

	<b>Adjusting program (CAL):</b> For quick setting of the balance's accuracy. External adjusting weight required.		<b>Control outputs (optocoupler, digital I/O):</b> to connect relays, signal lamps, valves, etc.		<b>Mains adapter:</b> 230V/50Hz in standard version for EU. On request GB, AUS or USA version available.
	<b>Calibration block:</b> standard for adjusting or correcting the measuring device.		<b>Analogue interface:</b> to connect a suitable peripheral device for analogue processing of the measurements.		<b>Power supply:</b> Integrated, 230V/50Hz in EU. More standards e.g. GB, AUS or USA on request.
	<b>Peak hold function:</b> capturing a peak value within a measuring process.		<b>Statistics:</b> using the saved values, the device calculates statistical data, such as average value, standard deviation etc.		<b>Motorised drive:</b> The mechanical movement is carried out by a electric motor.
	<b>Scan mode:</b> continuous capture and display of measurements.		<b>PC Software:</b> to transfer the measurements from the device to a PC.		<b>Motorised drive:</b> The mechanical movement is carried out by a synchronous motor (stepper).
	<b>Push and Pull:</b> the measuring device can capture tension and compression forces.		<b>Printer:</b> a printer can be connected to the device to print out the measurements.		<b>Fast-Move:</b> the total length of travel can be covered by a single lever movement.
	<b>Length measurement:</b> captures the geometric dimensions of a test object or the movement during a test process.		<b>GLP/ISO record keeping:</b> of measurements with date, time and serial number. Only with SAUTER printers.		<b>DAkkS calibration possible:</b> The time required for DAkkS calibration is shown in days in the pictogram.
	<b>Focus function:</b> increases the measuring accuracy of a device within a defined measuring range.		<b>Measuring units:</b> Weighing units can be switched to e.g. non-metric at the touch of a key. Please refer to website for more details.		<b>Factory calibration:</b> The time required for factory calibration is specified in the pictogram.
	<b>Internal memory:</b> to save measurements in the device memory.		<b>Measuring with tolerance range:</b> Upper and lower limiting can be programmed individually, e.g. for sorting and dosing.		<b>Package shipment:</b> The time required for internal shipping preparations is shown in days in the pictogram.
	<b>Data interface RS-232:</b> bidirectional, for connection of printer and PC.		<b>ZERO:</b> Resets the display to "0".		<b>Pallet shipment:</b> The time required for internal shipping preparations is shown in days in the pictogram.
	<b>Data interface USB:</b> To connect the balance to a printer, PC or other peripheral devices.		<b>Battery operation:</b> Ready for battery operation. The battery type is specified for each device.		<b>Warranty:</b> The warranty period is shown in the pictogram.
	<b>Data interface Infrared:</b> To transfer data from the balance to a printer, PC or other peripheral devices.		<b>Rechargeable battery pack:</b> rechargeable set.		

## Your SAUTER specialist dealer:

**PROXIS** Slovakia

PROXIS Slovakia, spol. s r.o.  
Karloveská 63, 84101  
Bratislava, SLOVAKIA

www.proxis-ndt.sk  
ndt@proxis.eu